

HARKEN®

INSTRUCTION SHEET

Adjusting Angle - 9051 Micro Cam Swivel Base

N15W24983 Bluemound Rd, Pewaukee, WI 53072-4974


Telephone: (262) 691-3320 • Fax: (262) 701-5780

Web: www.harken.com • Email: harken@harken.com

Part No.	Mounting fasteners	Min line Ø	Max line Ø
9051	5 mm flathead #10 flathead	3 mm 1/8"	6 mm 1/4"

The cam arm on the 9051 can adjust to change the up-down angle from the deck from 5° to 17°. To change angle of cam arm:

1. Use a 3 mm hex key to loosen two top screws above sheaves.

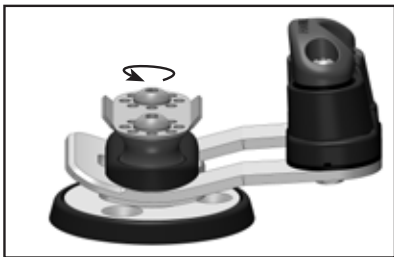

2. Angle the cam arm to the desired angle and retighten screws.

